

# IM(G): One time ComCam Image Ingestion and MTAOS Correction

This notebook is used to execute the [LVV-T2228 \(1.0\)](#) test script during System Spread Integration Tests on Level 3.

It is part of the plan [LVV-P81](#) and of the test cycle [LVV-C176](#).

Execution steps are separated by horizontal lines.

Upon completion, save the notebook and its output as a pdf file to be attached to the test execution in JIRA.

In summary, you slew to a target and start tracking. Then you find the Wavefront Error as Zernike Coefficients, convert them to corrections to be applied to M1M3, M2, Camera Hexapod and M2 Hexapod. Finally you stop tracking.

```
In [17]: from lsst.ts import utils
import yaml

# Extract your name from the Jupyter Hub
__executed_by__ = os.environ["JUPYTERHUB_USER"]

# Extract execution date
__executed_on__ = utils.astropy_time_from_tai_unix(utils.current_tai())
__executed_on__.format = "isot"

# This is used later to define where Butler stores the images
summit = os.environ["LSST_DDS_PARTITION_PREFIX"] == "summit"

print(f"\nExecuted by {__executed_by__} on {__executed_on__}."
      f"\n At the summit? {summit}")
```

```
Executed by isotuela on 2022-05-13T17:48:52.508.
At the summit? True
```

---

## Initial Setup

log onto the summit nublado

<https://summit-lsp.lsst.codes/>

git clone the ts\_notebook repo

There will be a series of procedures to set up, "slew" and track the telescope before we get an image.

This is similar to test case [LVV-T2189](#).

---

## Check ComCam Playback Mode

Verify that ComCam can be use the playback option and that the required images are stored in the right place **TBD**.

---

## Load all the needed libraries

Using the setup procedure, get the remotes and the components ready.

This includes simulators as well as real hardware when available (this will depend on when the test is conducted at NCSA or on level 3 or on the telescope):

- pointing
- mount ( with the CCW)
- rotator
- ready M1M3: raise mirror, turn on FB, clear forces. Note that if used at level 3, we need to have M1M3 LUT use mount telemetry
- ready M2: turn on FB, clear forces. Note that if used at level 3, we need to have M2 LUT use mount telemetry
- Get cam hex Ready: check config; make sure LUT is on and has valid inputs; make sure hex is at LUT position
- Get M2 hex (simulator) Ready: check config; make sure LUT is on and has valid inputs; make sure hex is at LUT position
- Finally, get the MTAOS CSC ready

```
In [18]: %load_ext autoreload
         %autoreload 2
```

The autoreload extension is already loaded. To reload it, use:  
%reload\_ext autoreload

```
In [19]: import rubin_jupyter_utils.lab.notebook as nb
         nb.utils.get_node()
```

```
/tmp/ipykernel_19312/1665379685.py:2: DeprecationWarning: Call to deprecated function (or staticmethod) get_node. (Please use lsst.rsp.get_node())
  nb.utils.get_node()
```

```
Out[19]: 'yagan06'
```

```
In [20]: import os
import sys
import asyncio
import logging

import pandas as pd
import numpy as np

from matplotlib import pyplot as plt

import lsst.daf.butler as dafButler

from lsst.ts import salobj
from lsst.ts.observatory.control.maintel import MTCS, ComCam
from lsst.ts.observatory.control import RotType
```

```
In [21]: logging.basicConfig(format="%(name)s:%(message)s", level=logging.DEBUG)
```

```
In [22]: log = logging.getLogger("setup")
log.level = logging.DEBUG
```

```
In [23]: domain = salobj.Domain()
```

```
In [24]: mtcs = MTCS(domain=domain, log=log)
mtcs.set_rem_loglevel(40)
```

```
|setup.MTCS DEBUG: mtmount: Adding all resources.
|setup.MTCS DEBUG: mtptg: Adding all resources.
|setup.MTCS DEBUG: mtaos: Adding all resources.
|setup.MTCS DEBUG: mtm1m3: Adding all resources.
|setup.MTCS DEBUG: mtm2: Adding all resources.
|setup.MTCS DEBUG: mthexapod_1: Adding all resources.
|setup.MTCS DEBUG: mthexapod_2: Adding all resources.
|setup.MTCS DEBUG: mtrotator: Adding all resources.
|setup.MTCS DEBUG: mtdome: Adding all resources.
|setup.MTCS DEBUG: mtdometrajectory: Adding all resources.
```

```
In [25]: await mtcs.start_task
```

```
|MTHexapod INFO: Read historical data in 0.06 sec
|MTHexapod INFO: Read historical data in 0.06 sec
|MTHexapod.electrical WARNING: tel_electrical DDS read queue is filling:
|25 of 100 elements
|MTHexapod.electrical WARNING: tel_electrical DDS read queue is filling:
|13 of 100 elements
Out[25]: [None, None, None, None, None, None, None, None, None, None]
|MTHexapod.electrical WARNING: tel_electrical DDS read queue is filling:
|18 of 100 elements
```

```
In [26]: comcam = ComCam(domain=domain, log=log)
comcam.set_rem_loglevel(40)
```

```
|setup.ComCam DEBUG: cccamera: Adding all resources.
```

```

|setup.ComCam DEBUG: cheaderservice: Adding all resources.
|setup.ComCam DEBUG: ccoods: Adding all resources.

```

In [27]: `await comcam.start_task`

```

|MTHexapod.electrical WARNING: tel_electrical DDS read queue is filling:
|15 of 100 elements
|MTHexapod.application WARNING: tel_application DDS read queue is fillin
|g: 28 of 100 elements
|MTHexapod.application WARNING: tel_application DDS read queue is fillin
|g: 34 of 100 elements
|MTM1M3.pidData ERROR: tel_pidData DDS read queue is full (100 elements);
|data may be lost
|MTHexapod.application WARNING: tel_application DDS read queue is fillin
|g: 56 of 100 elements
|MTHexapod.actuators WARNING: tel_actuators DDS read queue is filling: 27
|of 100 elements
|MTHexapod.actuators WARNING: tel_actuators DDS read queue is filling: 34
|of 100 elements
|MTHexapod.actuators WARNING: tel_actuators DDS read queue is filling: 16
|of 100 elements
|MTHexapod.actuators WARNING: tel_actuators DDS read queue is filling: 56
|of 100 elements
|MTM1M3.inclinometerData ERROR: tel_inclinometerData DDS read queue is fu
|ll (100 elements); data may be lost
|MTM1M3.imsData ERROR: tel_imsData DDS read queue is full (100 elements);
|data may be lost
|MTM1M3.hardpointMonitorData ERROR: tel_hardpointMonitorData DDS read que
|ue is full (100 elements); data may be lost
|MTM1M3.hardpointActuatorData ERROR: tel_hardpointActuatorData DDS read q
|ueue is full (100 elements); data may be lost

```

Out[27]: `[None, None, None]`

```

|MTM1M3.forceActuatorData ERROR: tel_forceActuatorData DDS read queue is
|full (100 elements); data may be lost
|MTM1M3.accelerometerData ERROR: tel_accelerometerData DDS read queue is
|full (100 elements); data may be lost
|MTM1M3.accelerometerData ERROR: tel_accelerometerData DDS read queue is
|full (100 elements); data may be lost
|MTM1M3.logevent_appliedThermalForces ERROR: evt_appliedThermalForces DDS
|read queue is full (100 elements); data may be lost
|MTM1M3.logevent_appliedForces ERROR: evt_appliedForces DDS read queue is
|full (100 elements); data may be lost
|MTM1M3.logevent_appliedStaticForces ERROR: evt_appliedStaticForces DDS r
|ead queue is full (100 elements); data may be lost
|MTM1M3.logevent_appliedElevationForces ERROR: evt_appliedElevationForces
|DDS read queue is full (100 elements); data may be lost
|MTM1M3.logevent_appliedForces ERROR: evt_appliedForces DDS read queue is
|full (100 elements); data may be lost
|MTM1M3.logevent_appliedCylinderForces ERROR: evt_appliedCylinderForces D
|DS read queue is full (100 elements); data may be lost
|MTM1M3.logevent_appliedElevationForces ERROR: evt_appliedElevationForces
|DDS read queue is full (100 elements); data may be lost

```

```

MTM1M3.logevent_appliedBalanceForces ERROR: evt_appliedBalanceForces DDS
read queue is full (100 elements); data may be lost
MTM1M3.logevent_appliedCylinderForces ERROR: evt_appliedCylinderForces D
DS read queue is full (100 elements); data may be lost
MTM1M3.logevent_appliedAzimuthForces ERROR: evt_appliedAzimuthForces DDS
read queue is full (100 elements); data may be lost
MTM1M3.logevent_appliedActiveOpticForces DDS read queue is full (100 elements); data may be lost
MTM1M3.logevent_appliedBalanceForces ERROR: evt_appliedBalanceForces DDS
read queue is full (100 elements); data may be lost
MTM1M3.logevent_appliedAzimuthForces ERROR: evt_appliedAzimuthForces DDS
read queue is full (100 elements); data may be lost
MTM1M3.logevent_appliedActiveOpticForces ERROR: evt_appliedActiveOpticFo
rces DDS read queue is full (100 elements); data may be lost
MTM1M3.logevent_appliedAberrationForces ERROR: evt_appliedAberrationForc
es DDS read queue is full (100 elements); data may be lost
MTM1M3.logevent_appliedAberrationForces ERROR: evt_appliedAberrationForc
es DDS read queue is full (100 elements); data may be lost

```

In [12]: `await comcam.enable()`

```

setup.ComCam INFO: Enabling all components
setup.ComCam DEBUG: Expand overrides None
setup.ComCam DEBUG: Complete overrides: {'cccamera': '', 'cheadersservic
e': '', 'ccoods': ''}
setup.ComCam DEBUG: [cccamera]::[<State.ENABLED: 2>]
setup.ComCam DEBUG: [cheadersservice]::[<State.ENABLED: 2>]
setup.ComCam DEBUG: [ccoods]::[<State.ENABLED: 2>]
setup.ComCam INFO: All components in <State.ENABLED: 2>.

```

In [34]: `await mtcs.enable()`

```

setup.MTCS INFO: Enabling all components
setup.MTCS DEBUG: Expand overrides None
setup.MTCS DEBUG: Complete overrides: {'mtmount': '', 'mtptg': '', 'mtao
s': '', 'mtm1m3': '', 'mtm2': '', 'mthexapod_1': '', 'mthexapod_2': '',
'mtrotator': '', 'mtdome': '', 'mtdometrajectory': ''}
setup.MTCS DEBUG: [mtmount]::[<State.ENABLED: 2>]
setup.MTCS DEBUG: [mtptg]::[<State.FAULT: 3>, <State.STANDBY: 5>, <Stat
e.DISABLED: 1>, <State.ENABLED: 2>]
setup.MTCS DEBUG: [mtaos]::[<State.ENABLED: 2>]
setup.MTCS DEBUG: [mtm1m3]::[<State.ENABLED: 2>]
setup.MTCS DEBUG: [mtm2]::[<State.ENABLED: 2>]
setup.MTCS DEBUG: [mthexapod_1]::[<State.ENABLED: 2>]
setup.MTCS DEBUG: [mthexapod_2]::[<State.ENABLED: 2>]
setup.MTCS DEBUG: [mtrotator]::[<State.FAULT: 3>, <State.STANDBY: 5>, <S
tate.DISABLED: 1>, <State.ENABLED: 2>]
setup.MTCS DEBUG: [mtdome]::[<State.ENABLED: 2>]
setup.MTCS DEBUG: [mtdometrajectory]::[<State.ENABLED: 2>]
setup.MTCS INFO: All components in <State.ENABLED: 2>.

```

## Slew and Track

Using the slew procedure, slew the systems to a specific elevation, azimuth and rotator angle. Verify that the telemetry is generated.

Slew to **RA 20:28:18.74** and **DEC -87:28:19.9** with **rot\_type=RotType.Physical** and **Rotator Angle of 0°**. We use this field because it is the field that was simulated and that is a field that is visible the whole year.

RotType Physical Ensures that the Rotator will not move. This is necessary because the CCW is not running (MTmount in simulation mode).

Slew to target:

```
In [35]: await mtcs.slew_icrs(ra="20:28:18.74", dec="-87:28:19.9", rot_type=RotType.S

| setup.MTCS DEBUG: RotSky = 0.0 deg, RotPhys = -56.39022798668128 deg.
| setup.MTCS DEBUG: Wait 5.0s for rotator to settle down.
| setup.MTCS DEBUG: Workaround for rotator trajectory problem. Moving rota
| tor to its current position: 35.81
| setup.MTCS DEBUG: Wait for MTRotator in position event.
| setup.MTCS DEBUG: MTRotator in position: False.
| setup.MTCS INFO: MTRotator in position: True.
| setup.MTCS DEBUG: MTRotator in position True. Waiting settle time 5.0s
| setup.MTCS DEBUG: Sending slew command.
| setup.MTCS DEBUG: Scheduling check coroutines
| setup.MTCS DEBUG: process as completed...
| setup.MTCS DEBUG: Monitor position started.
| setup.MTCS DEBUG: Waiting for Target event from mtmount.
| setup.MTCS DEBUG: mtmount: <State.ENABLED: 2>
| setup.MTCS DEBUG: mtptg: <State.ENABLED: 2>
| setup.MTCS DEBUG: mtaos: <State.ENABLED: 2>
| setup.MTCS DEBUG: mtm1m3: <State.ENABLED: 2>
| setup.MTCS DEBUG: mtm2: <State.ENABLED: 2>
| setup.MTCS DEBUG: mthexapod_1: <State.ENABLED: 2>
| setup.MTCS DEBUG: mthexapod_2: <State.ENABLED: 2>
| setup.MTCS DEBUG: mtrotator: <State.ENABLED: 2>
| setup.MTCS DEBUG: mtdome: <State.ENABLED: 2>
| setup.MTCS DEBUG: mtdometrajectory: <State.ENABLED: 2>
| setup.MTCS DEBUG: Wait for mtmount in position events.
| setup.MTCS DEBUG: Wait for dome in position event.
| setup.MTCS DEBUG: Wait for MTRotator in position event.
| setup.MTCS DEBUG: MTRotator in position: True.
| setup.MTCS DEBUG: MTRotator already in position. Handling potential race
| condition.
| setup.MTCS DEBUG: Wait for MTMount elevation in position event.
```

```

|setup.MTCS DEBUG: MTMount elevation in position: True.
|setup.MTCS DEBUG: MTMount elevation already in position. Handling potent
|ial race condition.
|setup.MTCS DEBUG: Wait for MTMount azimuth in position event.
|setup.MTCS DEBUG: MTMount azimuth in position: True.
|setup.MTCS DEBUG: MTMount azimuth already in position. Handling potentia
|l race condition.
|setup.MTCS DEBUG: Mount target: private_revCode: bdc00ba, private_sndSt
|amp: 1652464555.5858283, private_rcvStamp: 1652464555.5860295, private_s
|eqNum: 15788, private_identity: MTMount, private_origin: 35669, elevatio
|n: 28.938054616649385, elevationVelocity: -0.00016237357845076046, azimu
|th: 182.58064853085003, azimuthVelocity: -0.0001126875863604083, taiTim
|e: 1652464555.6449785, trackId: 3, tracksys: SIDERREAL, radesys: ICRS, pr
|iority: 0
|setup.MTCS INFO: MTMount elevation in position: False.
|setup.MTCS INFO: MTMount azimuth in position: False.
|setup.MTCS INFO: MTMount azimuth in position: True.
|setup.MTCS DEBUG: MTMount azimuth in position True. Waiting settle time
|3.0s
|setup.MTCS INFO: MTMount elevation in position: True.
|setup.MTCS DEBUG: MTMount elevation in position True. Waiting settle tim
|e 3.0s
|setup.MTCS INFO: MTRotator in position: False.
|setup.MTCS DEBUG: [Tel]: Az = +182.577[ +0.0]; El = +028.945[ -0.0] [R
|ot]: +035.812[ -0.0] [Dome] Az = +000.000; El = +000.000
|setup.MTCS DEBUG: Dome azimuth in position.
|setup.MTCS DEBUG: Dome elevation in position.
|setup.MTCS DEBUG: [Tel]: Az = +182.580[ -0.0]; El = +028.937[ -0.0] [R
|ot]: +053.121[ -0.0] [Dome] Az = +000.000; El = +000.000
|setup.MTCS INFO: MTRotator in position: True.
|setup.MTCS DEBUG: MTRotator in position True. Waiting settle time 3.0s
|setup.MTCS DEBUG: [Tel]: Az = +182.579[ -0.0]; El = +028.936[ -0.0] [R
|ot]: +056.486[ -0.0] [Dome] Az = +000.000; El = +000.000
Out[35]: (<ICRS Coordinate: (ra, dec) in deg
          (307.07808333, -87.47219444)>,
          <Angle 0. deg>)

```

## Take in-focus image

Once the different components are ready (M1M3, M2, rotator and CCW, hexapods) and tracking, take an image using the `take_image` command in playback mode.

This second image should be the one that uses the correction calculated with the first slew.

```

In [36]: exp_focus = await comcam.take_object(15)
          print(f"Target exposure: {exp_focus}")

```

```

|setup.ComCam DEBUG: Generating group_id

```



```

| setup.ComCam DEBUG: imagetype: OBJECT, TCS synchronization not configure
| d.
| Target exposure: [2022051300008]

```

---

## Intra Focus Position

Using the Camera Hexapod, piston ComCam +1mm

```

In [37]: await mtcs.move_camera_hexapod(x=0,y=0,z=1000,u=0,v=0, w=0)

| setup.MTCS INFO: Camera Hexapod compensation mode enabled. Move will off
| set with respect to LUT.
| setup.MTCS DEBUG: Wait for Camera Hexapod in position event.
| setup.MTCS DEBUG: Camera Hexapod in position: True.
| setup.MTCS DEBUG: Camera Hexapod already in position. Handling potential
| race condition.
| setup.MTCS INFO: Camera Hexapod in position: False.
| setup.MTCS INFO: Camera Hexapod in position: True.
| setup.MTCS DEBUG: Camera Hexapod in position True. Waiting settle time
| 5.0s

```

---

## Intra Focus Image

While tracking, take an image with ComCam and check that the header is containing the right telemetry

```

In [38]: exp_intra = await comcam.take_object(15)
| print(f"Target 1 exposure: {exp_intra}")

| setup.ComCam DEBUG: Generating group_id
| setup.ComCam DEBUG: imagetype: OBJECT, TCS synchronization not configure
| d.
| Target 1 exposure: [2022051300009]

```

---

## Extra Focus Position

Using the Camera Hexapod, piston ComCam to -1mm

```

In [39]: await mtcs.move_camera_hexapod(x=0,y=0,z=-1000,u=0,v=0, w=0)

| setup.MTCS INFO: Camera Hexapod compensation mode enabled. Move will off
| set with respect to LUT.
| setup.MTCS DEBUG: Wait for Camera Hexapod in position event.
| setup.MTCS DEBUG: Camera Hexapod in position: True.

```



```

| setup.MTCS DEBUG: Camera Hexapod already in position. Handling potential
| race condition.
| setup.MTCS INFO: Camera Hexapod in position: False.
| setup.MTCS INFO: Camera Hexapod in position: True.
| setup.MTCS DEBUG: Camera Hexapod in position True. Waiting settle time
| 5.0s

```

---

## Extra Focus Image

While tracking, take an image with ComCam and check that the header is containing the right telemetry.

```

In [40]: exp_extra = await comcam.take_object(15)
          print(f"Target 1 exposure: {exp_extra}")

| setup.ComCam DEBUG: Generating group_id
| setup.ComCam DEBUG: imagetype: OBJECT, TCS synchronization not configure
| d.
          Target 1 exposure: [2022051300010]

```

---

## Go Back to Focus Position

Put the hexapod back to 0mm.

```

In [41]: await mtcs.move_camera_hexapod(x=0,y=0,z=0,u=0,v=0, w=0)

| setup.MTCS INFO: Camera Hexapod compensation mode enabled. Move will off
| set with respect to LUT.
| setup.MTCS DEBUG: Wait for Camera Hexapod in position event.
| setup.MTCS DEBUG: Camera Hexapod in position: True.
| setup.MTCS DEBUG: Camera Hexapod already in position. Handling potential
| race condition.
| setup.MTCS INFO: Camera Hexapod in position: False.
| setup.MTCS INFO: Camera Hexapod in position: True.
| setup.MTCS DEBUG: Camera Hexapod in position True. Waiting settle time
| 5.0s

```

---

## Stop Tracking

If using MTMount Simulator and CCW Following Mode Disabled, stop tracking to prevent the Rotator to hit the limit switches.

```

In [42]: await mtcs.stop_tracking()

```

| `setup.MTCS DEBUG`: Stop tracking.

---

## Get Zernike Coefficients

Use the MTAOS Wavefront Estimator Pipeline to calculate the required Zernike Coefficients that represent the Wavefront data.

```
In [44]: wep_config = yaml.safe_dump(
    dict(
        tasks=dict(
            isr=dict(
                config=dict(
                    doOverscan=False,
                    doApplyGains=False,
                )
            ),
            generateDonutCatalogWcsTask=dict(
                config={
                    "filterName": "phot_g_mean",
                    "connections.refCatalogs": "gaia_dr2_20200414",
                    "donutSelector.sourceLimit": 10,
                    "donutSelector.fluxField": "phot_g_mean_flux"
                }
            )
        )
    )
)
```

In [ ]:

```
In [45]: await mtcs.rem.mtaos.cmd_runWEP.set_start(visitId=exp_intra[0],
    extraId=exp_extra[0],
    config = wep_config)
```

Out[45]: <ddsutil.MTAOS\_ackcmd\_fd03e870 at 0x7f44e08c1820>

| `MTM1M3.logevent_appliedAberrationForces` ERROR: evt\_appliedAberrationForces DDS read queue is full (100 elements); data may be lost

---

## Get Corrections

Use the MTAOS Optical Feedback Controller to retrieve the corrections that should be applied to m1m3, m2, camera hexapod, and m2 hexapod.

```
In [46]: await mtcs.rem.mtaos.cmd_runOFC.start(timeout=60.)
```

Out[46]: <ddsutil.MTAOS\_ackcmd\_fd03e870 at 0x7f4407f77760>

---

## Issue the corrections

Issue the corrections found by the MTAOS OFC to m1m3, m2, camera hexapod, and m2 hexapod.

```
In [47]: await mtcs.rem.mtaos.cmd_issueCorrection.start(timeout=60.)
Out[47]: <ddsutil.MTAOS_ackcmd_fd03e870 at 0x7f44e0d24610>
```

---

## Verify ISR Data

Make sure that the Instrument Signature Removal ran on the intra- and extra-focus data and that this data is accessible via Butler.

```
In [48]: if summit:
          butler = dafButler.Butler("/repo/LSSTComCam/")
        else:
          butler = dafButler.Butler("/repo/main/")

MTHexapod.electrical WARNING: tel_electrical DDS read queue is filling:
25 of 100 elements
MTHexapod.electrical WARNING: tel_electrical DDS read queue is filling:
13 of 100 elements
MTHexapod.electrical WARNING: tel_electrical DDS read queue is filling:
13 of 100 elements
MTHexapod.electrical WARNING: tel_electrical DDS read queue is filling:
26 of 100 elements
MTHexapod.application WARNING: tel_application DDS read queue is fillin
g: 13 of 100 elements
MTHexapod.application WARNING: tel_application DDS read queue is fillin
g: 13 of 100 elements
MTHexapod.application WARNING: tel_application DDS read queue is fillin
g: 26 of 100 elements
MTHexapod.application WARNING: tel_application DDS read queue is fillin
g: 26 of 100 elements
MTHexapod.actuators WARNING: tel_actuators DDS read queue is filling: 12
of 100 elements
MTHexapod.actuators WARNING: tel_actuators DDS read queue is filling: 12
of 100 elements
MTHexapod.actuators WARNING: tel_actuators DDS read queue is filling: 25
of 100 elements
MTHexapod.actuators WARNING: tel_actuators DDS read queue is filling: 25
of 100 elements
MTM1M3.logevent_appliedBalanceForces ERROR: evt_appliedBalanceForces DDS
read queue is full (100 elements); data may be lost
```

```

MTM1M3.logevent_appliedElevationForces ERROR: evt_appliedElevationForces
DDS read queue is full (100 elements); data may be lost
MTM1M3.logevent_appliedAzimuthForces ERROR: evt_appliedAzimuthForces DDS
read queue is full (100 elements); data may be lost
MTM1M3.logevent_appliedActiveOpticForces ERROR: evt_appliedActiveOpticFo
rces DDS read queue is full (100 elements); data may be lost
MTM1M3.logevent_appliedCylinderForces ERROR: evt_appliedCylinderForces D
DS read queue is full (100 elements); data may be lost
MTM1M3.logevent_appliedBalanceForces ERROR: evt_appliedBalanceForces DDS
read queue is full (100 elements); data may be lost
MTM1M3.logevent_appliedAberrationForces ERROR: evt_appliedAberrationForc
es DDS read queue is full (100 elements); data may be lost
MTM1M3.logevent_appliedAzimuthForces ERROR: evt_appliedAzimuthForces DDS
read queue is full (100 elements); data may be lost
MTM1M3.logevent_appliedActiveOpticForces ERROR: evt_appliedActiveOpticFo
rces DDS read queue is full (100 elements); data may be lost
MTM1M3.logevent_appliedAberrationForces ERROR: evt_appliedAberrationForc
es DDS read queue is full (100 elements); data may be lost

```

```

In [49]: registry = butler.registry

collections = [collection for collection in registry.queryCollections()
               if collection.startswith('mtaos_wep')]

```

```

In [50]: exp_intra_id = {'instrument': 'LSSTComCam',
                        'detector': 0,
                        'exposure': exp_intra[0]}

raw_intra = butler.get('postISRCCD', dataId=exp_intra_id,
                      collections=collections)

print(raw_intra.getMetadata())

```

```
DATE = "2022-05-13T17:56:59.912"
// Creation Date and Time of File
MJD = 59712.747915648
// Modified Julian Date that the file was written
CCD_MANU = "ITL"
// CCD Manufacturer
CCD_TYPE = "3800C"
// CCD Model Number
TESTTYPE = "OBJECT"
// BIAS, DARK, FE55, FLAT, LAMBDA, PERSISTENCE, SP
IMGTYPE = "OBJECT"
// BIAS, DARK, FE55, FLAT, FLAT_<lam>, SPOT, PPUMP
FILENAME = "CC_0_20220513_000009_R22_S00.fits"
// Original name of the file
BINX = 1
// [pixels] binning along X axis
BINY = 1
// [pixels] binning along Y axis
CCDGAIN = 1.00000000000000
// Rough guess at overall system gain (e-/DNB)
CCDNOISE = 10.00000000000000
// Rough guess at system noise (e- rms)
DATE-TRG = "2022-05-13T17:56:22.910"
// Date of the image trigger (readout), UTC f
MJD-TRG = 59712.747487384
// Modified Julian Date of image trigger
IMAGETAG = "d5dbeb4c5ab3868"
// DAQ Image id (Hex)
CCDSLOT = "S00"
// The CCD Slot
RAFTBAY = "R22"
// The RAFT Bay
FIRMWARE = "302c5003"
// DAQ firmware version (Hex)
PLATFORM = "comcam"
// DAQ platform version
CONTNUM = "0"
// REB serial # (Hex)
DAQVERS = "no_release 2021-11-18T18:42:53Z (dirty,b76790e)"
// DAQ version
DAQPART = "emu"
// DAQ partition
DAQFOLD = "raw"
// DAQ folder the image was initially created in
OBSANNOT = ""
// DAQ image annotation
OBSID = "CC_0_20220513_000009"
// The image name or obs-id
CAMCODE = "CC"
// The "code" for AuxTel | ComCam | Main Camera
CONTRLLR = "0"
// The controller (e.g. 0 for OCS, C for CCS)
DAYOBS = "20220513"
// The observation day as defined in the image nam
SEQNUM = 9
// The sequence number from the image name
HEADVER = 2
// Version number of header
INSTRUME = "COMCAM"
```

```
// Instrument
TELESCOP = "LSST"
// Telescope
TSTAND = "EOCCv2_SUM"
// Test Stand
SEQFILE = "FP_ITL_2s_ir2_v25.seq"
// Sequencer file name
SEQNAME = "FP_ITL_2s_ir2_v25.seq"
// Sequencer file name
SEQCKSUM = "2552520002"
// Checksum of Sequencer
LSST_NUM = "ITL-3800C-229"
// LSST Assigned CCD Number
CCD_SERN = "23166"
// Manufacturers? CCD Serial Number
REBNAME = "LCA-13574-061"
// LSST Assigned Name REB name
RAFTNAME = "LCA-11021_RTM-031"
// LSST Assigned Raft name
EMUIMAGE = "CC_H_20211231_006001"
// Image bring emulated (from 2-day store)
DATE-BEG = "2022-05-13T17:56:41.861"
// Time at the start of integration
MJD-BEG = 59712.747706724
// Modified Julian Date derived from DATE-BEG
DATE-END = "2022-05-13T17:56:59.912"
// End date of the observation
MJD-END = 59712.747915648
// Date derived from DATE-END
FPVERS = "1.1.3"
// The focal-plane version number
IHVERS = "1.0.29"
// The image-handling version number
OBSGE0-X = 1818938.9400000
// [m] X-axis Geocentric coordinate
OBSGE0-Y = -5208470.9500000
// [m] Y-axis Geocentric coordinate
OBSGE0-Z = -3195172.0800000
// [m] Z-axis Geocentric coordinate
RA = 307.07808333333
// RA commanded from pointing component
DEC = -87.47219444444
// DEC commanded from pointing component
RASTART = 307.07816283616
// RA of telescope from AZSTART and ELSTART
DECSTART = -87.472194579545
// DEC of telescope from AZSTART and ELSTART
RAEND = 307.07816956008
// RA of telescope from AZEND and ELEN
DECEND = -87.472194590971
// DEC of telescope from AZEND and ELEN
ROTPA = 8.4879831658374e-314
// Rotation angle relative to the sky (deg)
ROTCOORD = "sky"
// Telescope Rotation Coordinates
HASTART = -15.988439119250
// [HH:MM:SS] Telescope hour angle at start
ELSTART = 28.930565493164
// [deg] Telescope zenith distance at start
```

```
AZSTART = 182.57543180320
// [deg] Telescope azimuth angle at start
AMSTART = 2.0609901584906
// Airmass at start
HAEND = -15.982749631920
// [HH:MM:SS] Telescope hour angle at end
ELEND = 28.927265378906
// [deg] Telescope zenith distance at end
AZEND = 182.57312075594
// [deg] Telescope azimuth angle at end
AMEND = 2.0612038325440
// Airmass at end
TRACKSYS = "RADEC"
// Tracking system RADEC, AZEL, PLANET, EPHEM
RADESYS = "ICRS"
// Equatorial coordinate system FK5 or ICRS
FOCUSZ = 833.97755011139
// Focus Z position
OBJECT = "slew_icrs"
// Name of the observed object
GROUPID = "2022-05-13T17:56:41.695"
BUNIT = "adu"
// Brightness units for pixel array
CURINDEX = 1
// Index number for exposure within the sequence
MAXINDEX = 1
// Number of requested images in sequence
PROGRAM = <Unknown>
// Name of the program
REASON = <Unknown>
// Reason for observation
FILT BAND = <Unknown>
// Name of the filter band
FILTER = "unknown"
// Name of the physical filter
FILTP OS = <Unknown>
// Filter measured position of slide
FILTSLOT = <Unknown>
// Filter home slot
SHUTTIME = 15.000000000000
// Shutter exposure time
SIMULATE MTMOUNT = 0
// MTMount Simulation Mode (False=0)
SIMULATE MTM1M3 = <Unknown>
// MTM1M3 Simulation Mode (False=0)
SIMULATE MTM2 = 0
// MTM2 Simulation Mode (False=0)
SIMULATE CAMHEXAPOD = 0
// CAMHexapod Simulation Mode (False=0)
SIMULATE M2HEXAPOD = 1
// M2Hexapod Simulation Mode (False=0)
SIMULATE MTR OTATOR = 0
// MTRotator Simulation Mode (False=0)
SIMULATE MTDOME = 1
// MTDome Simulation Mode (False=0)
SIMULATE MTDOMETRAJECTORY = 0
// MTDomeTrajectory Simulation Mode (False=0)
CHANNEL = 1
EXTNAME = "Segment10"
```



```
CCDSUM = "1 1"
DETSEC = "[509:1,1:2000]"
DETSIZE = "[1:4072,1:4000]"
DTV1 = 513
// detector transformation vector
DTV2 = 0
// detector transformation vector
DTM1_1 = -1.00000000000000
// detector transformation matrix
DTM2_2 = 1.00000000000000
// detector transformation matrix
DTM1_2 = 0.00000000000000
// detector transformation matrix
DTM2_1 = 0.00000000000000
// detector transformation matrix
WCSNAMEA = "AMPLIFIER"
// Name of coordinate system
CTYPE1A = "Seg_X"
// In the camera coordinate system
CTYPE2A = "Seg_Y"
// In the camera coordinate system
PC1_1A = 0.00000000000000
PC1_2A = -1.00000000000000
PC2_1A = -1.00000000000000
PC2_2A = 0.00000000000000
CDELT1A = 1.00000000000000
CDELT2A = 1.00000000000000
CRPIX1A = 0.00000000000000
CRPIX2A = 0.00000000000000
CRVAL1A = 2001.0000000000
CRVAL2A = 513.000000000000
WCSNAMEC = "CCD"
// Name of coordinate system
CTYPE1C = "CCD_X"
// In the camera coordinate system
CTYPE2C = "CCD_Y"
// In the camera coordinate system
PC1_1C = 0.00000000000000
PC1_2C = -1.00000000000000
PC2_1C = -1.00000000000000
PC2_2C = 0.00000000000000
CDELT1C = 1.00000000000000
CDELT2C = 1.00000000000000
CRPIX1C = 0.00000000000000
CRPIX2C = 0.00000000000000
CRVAL1C = 4001.0000000000
CRVAL2C = 513.000000000000
WCSNAMER = "RAFT"
// Name of coordinate system
CTYPE1R = "RAFT_X"
// In the camera coordinate system
CTYPE2R = "RAFT_Y"
// In the camera coordinate system
PC1_1R = 0.00000000000000
PC1_2R = -1.00000000000000
PC2_1R = -1.00000000000000
PC2_2R = 0.00000000000000
CDELT1R = 1.00000000000000
CDELT2R = 1.00000000000000
```

```
CRPIX1R = 0.00000000000000
CRPIX2R = 0.00000000000000
CRVAL1R = 4126.000000000000
CRVAL2R = 602.000000000000
WCSNAMEF = "FOCAL_PLANE"
// Name of coordinate system
CTYPE1F = "FP_X"
// In the camera coordinate system
CTYPE2F = "FP_Y"
// In the camera coordinate system
PC1_1F = 0.00000000000000
PC1_2F = -1.00000000000000
PC2_1F = -1.00000000000000
PC2_2F = 0.00000000000000
CDEL1F = 1.00000000000000
CDEL2F = 1.00000000000000
CRPIX1F = 0.00000000000000
CRPIX2F = 0.00000000000000
CRVAL1F = 29526.0000000000
CRVAL2F = 26002.0000000000
WCSNAMEE = "FP_SERPAR"
// Name of coordinate system
CTYPE1E = "FP_S"
// In the camera coordinate system
CTYPE2E = "FP_P"
// In the camera coordinate system
PC1_1E = -1.00000000000000
PC1_2E = 0.00000000000000
PC2_1E = 0.00000000000000
PC2_2E = -1.00000000000000
CDEL1E = 1.00000000000000
CDEL2E = 1.00000000000000
CRPIX1E = 0.00000000000000
CRPIX2E = 0.00000000000000
CRVAL1E = 26002.0000000000
CRVAL2E = 29526.0000000000
WCSNAMEB = "CCD_SERPAR"
// Name of coordinate system
CTYPE1B = "CCD_S"
// In the serial-parallel coordinate system
CTYPE2B = "CCD_P"
// In the serial-parallel coordinate system
PC1_1B = -1.00000000000000
PC1_2B = 0.00000000000000
PC2_1B = 0.00000000000000
PC2_2B = -1.00000000000000
CDEL1B = 1.00000000000000
CDEL2B = 1.00000000000000
CRPIX1B = 0.00000000000000
CRPIX2B = 0.00000000000000
CRVAL1B = 513.000000000000
CRVAL2B = 4001.000000000000
WCSNAMEQ = "RAFT_SERPAR"
// Name of coordinate system
CTYPE1Q = "RAFT_S"
// In the serial-parallel coordinate system
CTYPE2Q = "RAFT_P"
// In the serial-parallel coordinate system
PC1_1Q = -1.00000000000000
```

```
PC1_2Q = 0.00000000000000
PC2_1Q = 0.00000000000000
PC2_2Q = -1.00000000000000
CDEL1Q = 1.00000000000000
CDEL2Q = 1.00000000000000
CRPIX1Q = 0.00000000000000
CRPIX2Q = 0.00000000000000
CRVAL1Q = 602.000000000000
CRVAL2Q = 4126.000000000000
INHERIT = 1
// Extension inherits values from primary header
ASTRO METADATA FIX MODIFIED = 1
ASTRO METADATA FIX DATE = "2022-05-13T17:58:40.652933"
ASTRO METADATA FIX VERSION = "g4ae5eded10+a3e54b3923"
```

```
MTHexapod.electrical WARNING: tel_electrical DDS read queue is filling:
14 of 100 elements
MTHexapod.electrical WARNING: tel_electrical DDS read queue is filling:
28 of 100 elements
MTHexapod.electrical WARNING: tel_electrical DDS read queue is filling:
28 of 100 elements
MTHexapod.electrical WARNING: tel_electrical DDS read queue is filling:
14 of 100 elements
MTHexapod.application WARNING: tel_application DDS read queue is fillin
g: 14 of 100 elements
MTHexapod.application WARNING: tel_application DDS read queue is fillin
g: 14 of 100 elements
MTHexapod.actuators WARNING: tel_actuators DDS read queue is filling: 14
of 100 elements
MTHexapod.application WARNING: tel_application DDS read queue is fillin
g: 29 of 100 elements
MTHexapod.application WARNING: tel_application DDS read queue is fillin
g: 29 of 100 elements
MTHexapod.actuators WARNING: tel_actuators DDS read queue is filling: 14
of 100 elements
MTHexapod.actuators WARNING: tel_actuators DDS read queue is filling: 28
of 100 elements
MTHexapod.actuators WARNING: tel_actuators DDS read queue is filling: 28
of 100 elements
MTM1M3.logevent_appliedThermalForces ERROR: evt_appliedThermalForces DDS
read queue is full (100 elements); data may be lost
MTM1M3.logevent_appliedStaticForces ERROR: evt_appliedStaticForces DDS r
ead queue is full (100 elements); data may be lost
MTM1M3.logevent_appliedThermalForces ERROR: evt_appliedThermalForces DDS
read queue is full (100 elements); data may be lost
MTM1M3.logevent_appliedStaticForces ERROR: evt_appliedStaticForces DDS r
ead queue is full (100 elements); data may be lost
MTM1M3.logevent_appliedForces ERROR: evt_appliedForces DDS read queue is
full (100 elements); data may be lost
MTM1M3.logevent_appliedForces ERROR: evt_appliedForces DDS read queue is
full (100 elements); data may be lost
MTM1M3.logevent_appliedElevationForces ERROR: evt_appliedElevationForces
DDS read queue is full (100 elements); data may be lost
```

```

MTM1M3.logevent_appliedElevationForces ERROR: evt_appliedElevationForces
DDS read queue is full (100 elements); data may be lost
MTM1M3.logevent_appliedCylinderForces ERROR: evt_appliedCylinderForces D
DS read queue is full (100 elements); data may be lost
MTM1M3.logevent_appliedCylinderForces ERROR: evt_appliedCylinderForces D
DS read queue is full (100 elements); data may be lost
MTM1M3.logevent_appliedBalanceForces ERROR: evt_appliedBalanceForces DDS
read queue is full (100 elements); data may be lost
MTM1M3.logevent_appliedBalanceForces ERROR: evt_appliedBalanceForces DDS
read queue is full (100 elements); data may be lost
MTM1M3.logevent_appliedAzimuthForces ERROR: evt_appliedAzimuthForces DDS
read queue is full (100 elements); data may be lost
MTM1M3.logevent_appliedAzimuthForces ERROR: evt_appliedAzimuthForces DDS
read queue is full (100 elements); data may be lost
MTM1M3.logevent_appliedActiveOpticForces ERROR: evt_appliedActiveOpticFo
rces DDS read queue is full (100 elements); data may be lost
MTM1M3.logevent_appliedActiveOpticForces ERROR: evt_appliedActiveOpticFo
rces DDS read queue is full (100 elements); data may be lost
MTM1M3.logevent_appliedAberrationForces ERROR: evt_appliedAberrationForc
es DDS read queue is full (100 elements); data may be lost
MTM1M3.logevent_appliedAberrationForces ERROR: evt_appliedAberrationForc
es DDS read queue is full (100 elements); data may be lost

```

```

In [51]: %matplotlib inline
fig, ax = plt.subplots(num="Intra Focus Image", figsize=(7,7), dpi=90)

vmin = np.percentile(raw_intra.image.array, 2)
vmax = np.percentile(raw_intra.image.array, 98)


ax.imshow(raw_intra.image.array,
          origin='lower',
          interpolation='nearest',
          vmin=vmin,
          vmax=vmax)
ax.set_xlabel("X [px]")
ax.set_ylabel("Y [px]")

fig.suptitle(f"Intra Focus Image\n{exp_intra_id['exposure']}")
fig.tight_layout()

plt.show()

```

Intra Focus Image  
2022051300009

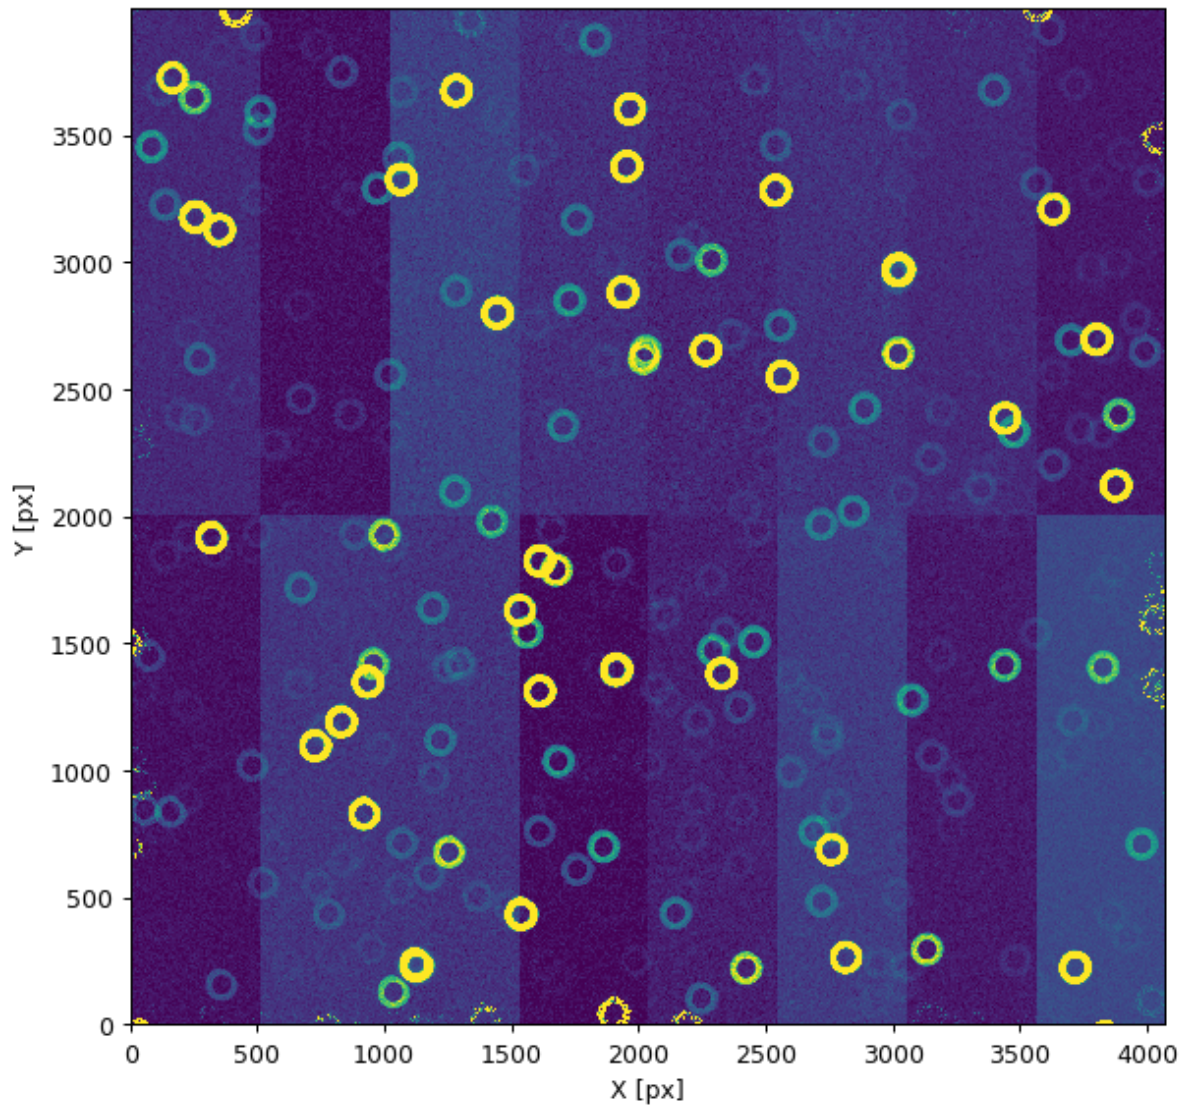

`MTHexapod.electrical` **WARNING:** tel\_electrical DDS read queue is filling:  
14 of 100 elements

`MTHexapod.electrical` **WARNING:** tel\_electrical DDS read queue is filling:  
14 of 100 elements

`MTHexapod.application` **WARNING:** tel\_application DDS read queue is fillin  
g: 14 of 100 elements

`MTHexapod.application` **WARNING:** tel\_application DDS read queue is fillin  
g: 14 of 100 elements

`MTHexapod.actuators` **WARNING:** tel\_actuators DDS read queue is filling: 14  
of 100 elements

`MTHexapod.actuators` **WARNING:** tel\_actuators DDS read queue is filling: 14  
of 100 elements

```
In [52]: exp_extra_id = {'instrument': 'LSSTComCam',  
                        'detector': 0,  
                        'exposure': exp_extra[0]}  
  
exp_extra = butler.get('postISRCCD', dataId=exp_extra_id,  
                      collections=collections)  
  
print(exp_extra.getMetadata())
```

```
DATE = "2022-05-13T17:57:25.928"
// Creation Date and Time of File
MJD = 59712.748216759
// Modified Julian Date that the file was written
CCD_MANU = "ITL"
// CCD Manufacturer
CCD_TYPE = "3800C"
// CCD Model Number
TESTTYPE = "OBJECT"
// BIAS, DARK, FE55, FLAT, LAMBDA, PERSISTENCE, SP
IMGTYPE = "OBJECT"
// BIAS, DARK, FE55, FLAT, FLAT_<lam>, SPOT, PPUMP
FILENAME = "CC_0_20220513_000010_R22_S00.fits"
// Original name of the file
BINX = 1
// [pixels] binning along X axis
BINY = 1
// [pixels] binning along Y axis
CCDGAIN = 1.00000000000000
// Rough guess at overall system gain (e-/DNB)
CCDNOISE = 10.00000000000000
// Rough guess at system noise (e- rms)
DATE-TRG = "2022-05-13T17:56:48.925"
// Date of the image trigger (readout), UTC f
MJD-TRG = 59712.747788484
// Modified Julian Date of image trigger
IMAGETAG = "7d4925e967ffcb62"
// DAQ Image id (Hex)
CCDSLOT = "S00"
// The CCD Slot
RAFTBAY = "R22"
// The RAFT Bay
FIRMWARE = "302c5003"
// DAQ firmware version (Hex)
PLATFORM = "comcam"
// DAQ platform version
CONTNUM = "0"
// REB serial # (Hex)
DAQVERS = "no_release 2021-11-18T18:42:53Z (dirty,b76790e)"
// DAQ version
DAQPART = "emu"
// DAQ partition
DAQFOLD = "raw"
// DAQ folder the image was initially created in
OBSANNOT = ""
// DAQ image annotation
OBSID = "CC_0_20220513_000010"
// The image name or obs-id
CAMCODE = "CC"
// The "code" for AuxTel | ComCam | Main Camera
CONTRLLR = "0"
// The controller (e.g. 0 for OCS, C for CCS)
DAYOBS = "20220513"
// The observation day as defined in the image nam
SEQNUM = 10
// The sequence number from the image name
HEADVER = 2
// Version number of header
INSTRUME = "COMCAM"
```



```
// Instrument
TELESCOP = "LSST"
// Telescope
TSTAND = "EOCCv2_SUM"
// Test Stand
SEQFILE = "FP_ITL_2s_ir2_v25.seq"
// Sequencer file name
SEQNAME = "FP_ITL_2s_ir2_v25.seq"
// Sequencer file name
SEQCKSUM = "2552520002"
// Checksum of Sequencer
LSST_NUM = "ITL-3800C-229"
// LSST Assigned CCD Number
CCD_SERN = "23166"
// Manufacturers? CCD Serial Number
REBNAME = "LCA-13574-061"
// LSST Assigned Name REB name
RAFTNAME = "LCA-11021_RTM-031"
// LSST Assigned Raft name
EMUIMAGE = "CC_H_20211231_006002"
// Image bring emulated (from 2-day store)
DATE-BEG = "2022-05-13T17:57:07.877"
// Time at the start of integration
MJD-BEG = 59712.748007836
// Modified Julian Date derived from DATE-BEG
DATE-END = "2022-05-13T17:57:25.928"
// End date of the observation
MJD-END = 59712.748216759
// Date derived from DATE-END
FPVERS = "1.1.3"
// The focal-plane version number
IHVERS = "1.0.29"
// The image-handling version number
OBSGE0-X = 1818938.9400000
// [m] X-axis Geocentric coordinate
OBSGE0-Y = -5208470.9500000
// [m] Y-axis Geocentric coordinate
OBSGE0-Z = -3195172.0800000
// [m] Z-axis Geocentric coordinate
RA = 307.07808333333
// RA commanded from pointing component
DEC = -87.47219444444
// DEC commanded from pointing component
RASTART = 307.07815776577
// RA of telescope from AZSTART and ELSTART
DECSTART = -87.472194570927
// DEC of telescope from AZSTART and ELSTART
RAEND = 307.07809408607
// RA of telescope from AZEND and ELEND
DECEND = -87.472194462717
// DEC of telescope from AZEND and ELEND
ROTPA = 8.4879831658374e-314
// Rotation angle relative to the sky (deg)
ROTCOORD = "sky"
// Telescope Rotation Coordinates
HASTART = -15.981187846581
// [HH:MM:SS] Telescope hour angle at start
ELSTART = 28.926346881659
// [deg] Telescope zenith distance at start
```

```
AZSTART = 182.57247619906
// [deg] Telescope azimuth angle at start
AMSTART = 2.0612624624394
// Airmass at start
HAEND = -15.975498504409
// [HH:MM:SS] Telescope hour angle at end
ELEND = 28.923058546271
// [deg] Telescope zenith distance at end
AZEND = 182.57016381055
// [deg] Telescope azimuth angle at end
AMEND = 2.0614759505486
// Airmass at end
TRACKSYS = "RADEC"
// Tracking system RADEC, AZEL, PLANET, EPHEM
RADESYS = "ICRS"
// Equatorial coordinate system FK5 or ICRS
FOCUSZ = -1166.0806339087
// Focus Z position
OBJECT = "slew_icrs"
// Name of the observed object
GROUPID = "2022-05-13T17:57:07.704"
BUNIT = "adu"
// Brightness units for pixel array
CURINDEX = 1
// Index number for exposure within the sequence
MAXINDEX = 1
// Number of requested images in sequence
PROGRAM = <Unknown>
// Name of the program
REASON = <Unknown>
// Reason for observation
FILT BAND = <Unknown>
// Name of the filter band
FILTER = "unknown"
// Name of the physical filter
FILTP OS = <Unknown>
// Filter measured position of slide
FILTSLOT = <Unknown>
// Filter home slot
SHUTTIME = 15.000000000000
// Shutter exposure time
SIMULATE MTMOUNT = 0
// MTMount Simulation Mode (False=0)
SIMULATE MTM1M3 = <Unknown>
// MTM1M3 Simulation Mode (False=0)
SIMULATE MTM2 = 0
// MTM2 Simulation Mode (False=0)
SIMULATE CAMHEXAPOD = 0
// CAMHexapod Simulation Mode (False=0)
SIMULATE M2HEXAPOD = 1
// M2Hexapod Simulation Mode (False=0)
SIMULATE MTR OTATOR = 0
// MTRotator Simulation Mode (False=0)
SIMULATE MTDOME = 1
// MTDome Simulation Mode (False=0)
SIMULATE MTDOMETRAJECTORY = 0
// MTDomeTrajectory Simulation Mode (False=0)
CHANNEL = 1
EXTNAME = "Segment10"
```

```
CCDSUM = "1 1"
DETSEC = "[509:1,1:2000]"
DETSIZE = "[1:4072,1:4000]"
DTV1 = 513
// detector transformation vector
DTV2 = 0
// detector transformation vector
DTM1_1 = -1.00000000000000
// detector transformation matrix
DTM2_2 = 1.00000000000000
// detector transformation matrix
DTM1_2 = 0.00000000000000
// detector transformation matrix
DTM2_1 = 0.00000000000000
// detector transformation matrix
WCSNAMEA = "AMPLIFIER"
// Name of coordinate system
CTYPE1A = "Seg_X"
// In the camera coordinate system
CTYPE2A = "Seg_Y"
// In the camera coordinate system
PC1_1A = 0.00000000000000
PC1_2A = -1.00000000000000
PC2_1A = -1.00000000000000
PC2_2A = 0.00000000000000
CDELTA1A = 1.00000000000000
CDELTA2A = 1.00000000000000
CRPIX1A = 0.00000000000000
CRPIX2A = 0.00000000000000
CRVAL1A = 2001.0000000000
CRVAL2A = 513.0000000000
WCSNAMEC = "CCD"
// Name of coordinate system
CTYPE1C = "CCD_X"
// In the camera coordinate system
CTYPE2C = "CCD_Y"
// In the camera coordinate system
PC1_1C = 0.00000000000000
PC1_2C = -1.00000000000000
PC2_1C = -1.00000000000000
PC2_2C = 0.00000000000000
CDELTA1C = 1.00000000000000
CDELTA2C = 1.00000000000000
CRPIX1C = 0.00000000000000
CRPIX2C = 0.00000000000000
CRVAL1C = 4001.0000000000
CRVAL2C = 513.0000000000
WCSNAMER = "RAFT"
// Name of coordinate system
CTYPE1R = "RAFT_X"
// In the camera coordinate system
CTYPE2R = "RAFT_Y"
// In the camera coordinate system
PC1_1R = 0.00000000000000
PC1_2R = -1.00000000000000
PC2_1R = -1.00000000000000
PC2_2R = 0.00000000000000
CDELTA1R = 1.00000000000000
CDELTA2R = 1.00000000000000
```

```
CRPIX1R = 0.00000000000000
CRPIX2R = 0.00000000000000
CRVAL1R = 4126.000000000000
CRVAL2R = 602.000000000000
WCSNAMEF = "FOCAL_PLANE"
// Name of coordinate system
CTYPE1F = "FP_X"
// In the camera coordinate system
CTYPE2F = "FP_Y"
// In the camera coordinate system
PC1_1F = 0.00000000000000
PC1_2F = -1.00000000000000
PC2_1F = -1.00000000000000
PC2_2F = 0.00000000000000
CDEL1F = 1.00000000000000
CDEL2F = 1.00000000000000
CRPIX1F = 0.00000000000000
CRPIX2F = 0.00000000000000
CRVAL1F = 29526.0000000000
CRVAL2F = 26002.0000000000
WCSNAMEE = "FP_SERPAR"
// Name of coordinate system
CTYPE1E = "FP_S"
// In the camera coordinate system
CTYPE2E = "FP_P"
// In the camera coordinate system
PC1_1E = -1.00000000000000
PC1_2E = 0.00000000000000
PC2_1E = 0.00000000000000
PC2_2E = -1.00000000000000
CDEL1E = 1.00000000000000
CDEL2E = 1.00000000000000
CRPIX1E = 0.00000000000000
CRPIX2E = 0.00000000000000
CRVAL1E = 26002.0000000000
CRVAL2E = 29526.0000000000
WCSNAMEB = "CCD_SERPAR"
// Name of coordinate system
CTYPE1B = "CCD_S"
// In the serial-parallel coordinate system
CTYPE2B = "CCD_P"
// In the serial-parallel coordinate system
PC1_1B = -1.00000000000000
PC1_2B = 0.00000000000000
PC2_1B = 0.00000000000000
PC2_2B = -1.00000000000000
CDEL1B = 1.00000000000000
CDEL2B = 1.00000000000000
CRPIX1B = 0.00000000000000
CRPIX2B = 0.00000000000000
CRVAL1B = 513.000000000000
CRVAL2B = 4001.000000000000
WCSNAMEQ = "RAFT_SERPAR"
// Name of coordinate system
CTYPE1Q = "RAFT_S"
// In the serial-parallel coordinate system
CTYPE2Q = "RAFT_P"
// In the serial-parallel coordinate system
PC1_1Q = -1.00000000000000
```

```

PC1_2Q = 0.00000000000000
PC2_1Q = 0.00000000000000
PC2_2Q = -1.00000000000000
CDEL1Q = 1.00000000000000
CDEL2Q = 1.00000000000000
CRPIX1Q = 0.00000000000000
CRPIX2Q = 0.00000000000000
CRVAL1Q = 602.000000000000
CRVAL2Q = 4126.000000000000
INHERIT = 1
// Extension inherits values from primary header
ASTRO METADATA FIX MODIFIED = 1
ASTRO METADATA FIX DATE = "2022-05-13T17:58:49.768472"
ASTRO METADATA FIX VERSION = "g4ae5eded10+a3e54b3923"

```

```

MTHexapod.electrical WARNING: tel_electrical DDS read queue is filling:
13 of 100 elements
MTHexapod.electrical WARNING: tel_electrical DDS read queue is filling:
13 of 100 elements
MTHexapod.application WARNING: tel_application DDS read queue is fillin
g: 14 of 100 elements
MTHexapod.actuators WARNING: tel_actuators DDS read queue is filling: 13
of 100 elements
MTHexapod.application WARNING: tel_application DDS read queue is fillin
g: 14 of 100 elements
MTHexapod.actuators WARNING: tel_actuators DDS read queue is filling: 13
of 100 elements

```

```

In [53]: %matplotlib inline
fig, ax = plt.subplots(num="Extra Focus Image", figsize=(7, 7), dpi=90)

vmin = np.percentile(exp_extra.image.array, 2)
vmax = np.percentile(exp_extra.image.array, 98)

ax.imshow(exp_extra.image.array,
          origin='lower',
          interpolation='nearest',
          vmin=vmin,
          vmax=vmax)


ax.set_xlabel("X [px]")
ax.set_ylabel("Y [px]")

fig.suptitle(f"Extra Focus Image\n{exp_extra_id['exposure']}")
fig.tight_layout()

plt.show()

```

Extra Focus Image  
2022051300010

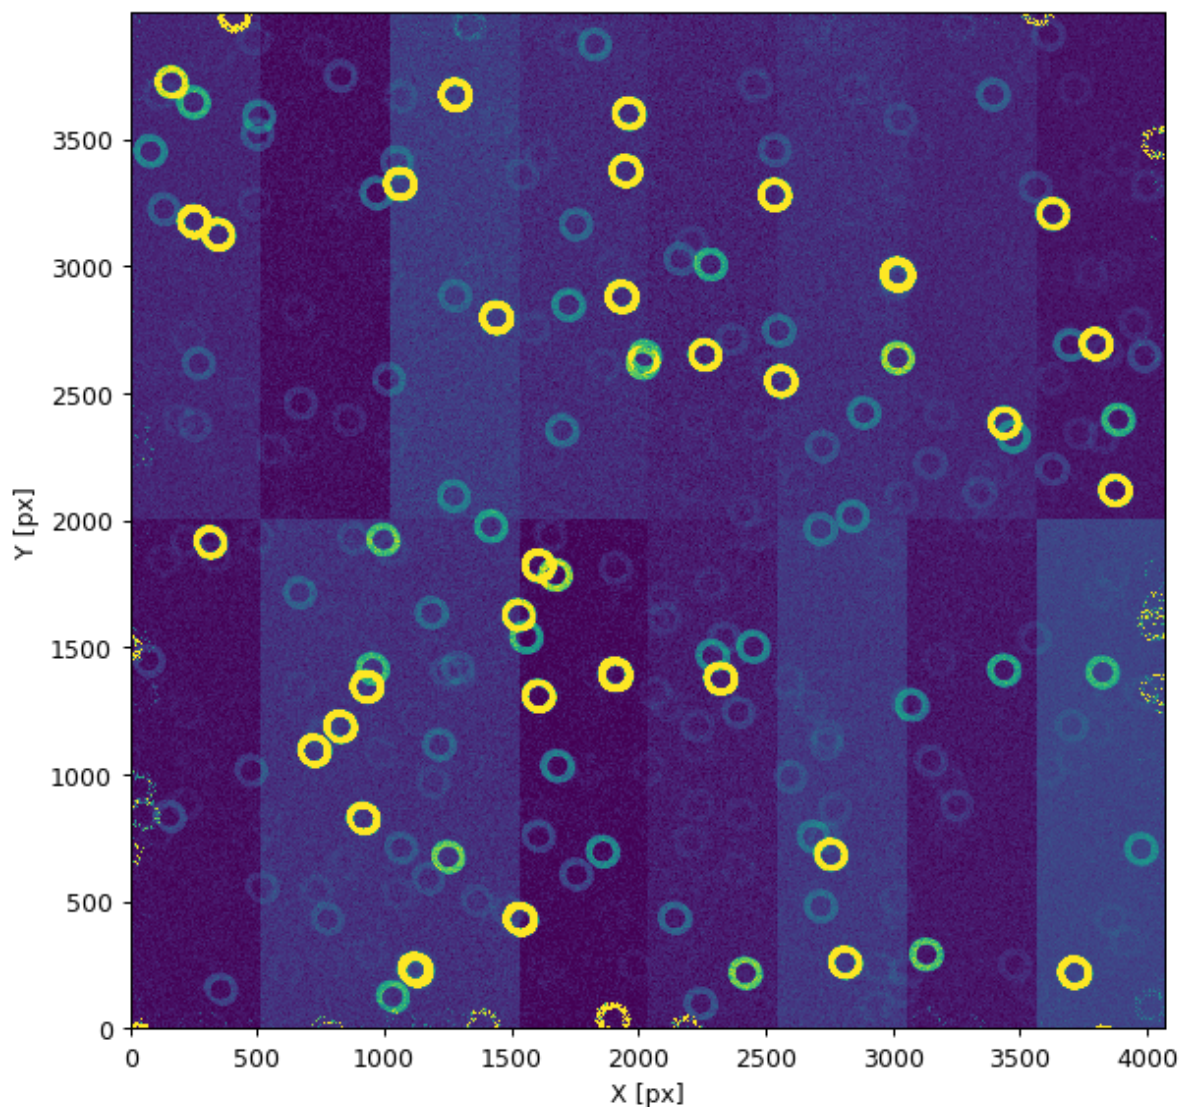

```

MTHexapod.electrical WARNING: tel_electrical DDS read queue is filling:
12 of 100 elements
MTHexapod.electrical WARNING: tel_electrical DDS read queue is filling:
12 of 100 elements
MTHexapod.application WARNING: tel_application DDS read queue is fillin
g: 13 of 100 elements
MTHexapod.application WARNING: tel_application DDS read queue is fillin
g: 13 of 100 elements
MTHexapod.actuators WARNING: tel_actuators DDS read queue is filling: 13
of 100 elements
MTHexapod.actuators WARNING: tel_actuators DDS read queue is filling: 13
of 100 elements
MTM1M3.logevent_appliedStaticForces ERROR: evt_appliedStaticForces DDS r
ead queue is full (100 elements); data may be lost
MTM1M3.logevent_appliedStaticForces ERROR: evt_appliedStaticForces DDS r
ead queue is full (100 elements); data may be lost
MTM1M3.logevent_appliedForces ERROR: evt_appliedForces DDS read queue is
full (100 elements); data may be lost

```

```

MTM1M3.logevent_appliedForces ERROR: evt_appliedForces DDS read queue is
full (100 elements); data may be lost
MTM1M3.logevent_appliedElevationForces ERROR: evt_appliedElevationForces
DDS read queue is full (100 elements); data may be lost
MTM1M3.logevent_appliedElevationForces ERROR: evt_appliedElevationForces
DDS read queue is full (100 elements); data may be lost
MTM1M3.logevent_appliedCylinderForces ERROR: evt_appliedCylinderForces D
DS read queue is full (100 elements); data may be lost
MTM1M3.logevent_appliedCylinderForces ERROR: evt_appliedCylinderForces D
DS read queue is full (100 elements); data may be lost
MTM1M3.logevent_appliedBalanceForces ERROR: evt_appliedBalanceForces DDS
read queue is full (100 elements); data may be lost
MTM1M3.logevent_appliedAzimuthForces ERROR: evt_appliedAzimuthForces DDS
read queue is full (100 elements); data may be lost
MTM1M3.logevent_appliedBalanceForces ERROR: evt_appliedBalanceForces DDS
read queue is full (100 elements); data may be lost
MTM1M3.logevent_appliedAzimuthForces ERROR: evt_appliedAzimuthForces DDS
read queue is full (100 elements); data may be lost
MTM1M3.logevent_appliedActiveOpticForces ERROR: evt_appliedActiveOpticFo
rces DDS read queue is full (100 elements); data may be lost
MTM1M3.logevent_appliedActiveOpticForces ERROR: evt_appliedActiveOpticFo
rces DDS read queue is full (100 elements); data may be lost
MTM1M3.logevent_appliedAberrationForces ERROR: evt_appliedAberrationForc
es DDS read queue is full (100 elements); data may be lost
MTM1M3.logevent_appliedAberrationForces ERROR: evt_appliedAberrationForc
es DDS read queue is full (100 elements); data may be lost

```

---

## Wrap Up and Shut Down

This section is intended for shutting down the system and should not be run as part of the regular testing procedure. Only run the following cells if you are done with the system and don't plan on executing any further tests.

```
In [ ]: await mtcs.set_state(salobj.State.STANDBY, components=["mtaos"])
```

```
In [ ]: await mtcs.lower_m1m3()
```

```
In [ ]: await mtcs.set_state(salobj.State.STANDBY, components=["mtm1m3"])
```

```
In [ ]: await mtcs.set_state(salobj.State.STANDBY, components=["mtm2"])
```

```
In [ ]: await mtcs.set_state(salobj.State.STANDBY, components=["mthexapod_1"])
```

```
In [ ]: await mtcs.set_state(salobj.State.STANDBY, components=["mthexapod_2"])
```

```
In [ ]: await mtcs.standby()
```

```
In [ ]: await comcam.standby()
```



